



Invisible Ink Pen™

Write and Decode Secret Messages

Ages 6 and Up
10126

3 386 (LR43) button-cell
batteries, included.

Important: Please save this instruction sheet. It contains valuable product information.

How to play with your SpyX Invisible Ink Pen (Fig 1)

1. Remove **PEN CAP**.
2. Write your invisible message on a piece of paper.
3. You can write messages on any paper, including **Small pieces of paper** that you can hide and transport inside the **SECRET STORAGE** (see below).
4. Hide your message in a secret location, or pass **It** to a friend to decode.

5. To decode the message, press and hold the **LIGHT SWITCH**. Shine the **DECODER LIGHT** at the message.

The invisible message will be revealed.

6. Always replace pen cap when finished writing.

Note: If the cap is left off and the **PEN TIP** dries out, press the tip to a damp cloth or sponge to moisten it.

Tip: Use the SpyX Invisible Ink Pen to mark your stuff and make sure you can always identify what's really yours!

TO UNLOCK THE SECRET STORAGE (Fig 2)

1. Unscrew the top half of the SpyX Invisible Ink pen counterclockwise until the top and bottom compartments separate.
2. The secret storage can be used to hide and store messages, extra paper, or other small items.
3. One roll of paper is included. Make refills by using your own paper.

BATTERY SAFETY INFORMATION

- Requires 3 386 (LR43) button-cell batteries, included.
 - Only adults should install and replace batteries.
 - Do not recharge non-rechargeable batteries.
 - Remove dead or exhausted batteries.
 - Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.

Do not use rechargeable batteries.

- Do not mix alkaline, standard (carbon-zinc), or Rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

Only the batteries of the same or equivalent type recommended to be used.

- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS—TO REPLACE BATTERIES

The SpyX Invisible Ink pen requires 3 386 (LR43) button-cell batteries, included.

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment. The screw will not fall out.
2. Open battery cover. Remove exhausted batteries.
3. Place new batteries in compartment as shown (Fig. 3).
4. Replace the battery cover and tighten screw.

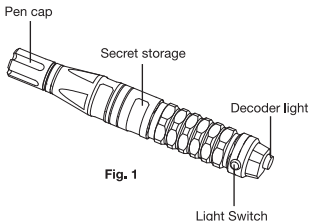


Fig. 1

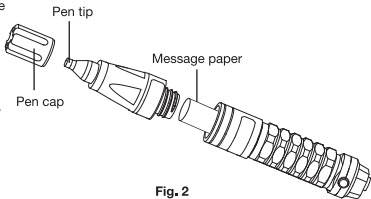


Fig. 2

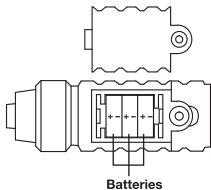


Fig. 3

Product specifications subject to change.

INVISIBLE INK PEN 10126-IS-US



IF YOU HAVE ANY QUESTIONS, PLEASE
CONTACT US AT
www.atomicmonkeyproducts.com/help

**CAUTION: Toy contains UV light.
Do not stare directly into beam.**