



# Motion Alarm™

Protect Your Stuff!

Ages 6 and Up  
10041

Requires 2 AAA (LR03)  
batteries, not included.

**Important: Please save this instruction sheet.  
The information is useful!**

## TO OPERATE The SPYX MOTION ALARM- Motion Detector

Place Motion Alarm near a place where you think people may walk, like a door or a hallway.

- The alarm works best in bright light.
- Turn on the alarm to position #M (Motion Detector). The red LED will flash after 3 seconds to show that the alarm is ready to go!
- If alarm does not sound, it could be because it needs a bit more light in the room. Test the alarm by moving your hand in front of the beam.
- The alarm will sound for 2 to 3 seconds show you that the alarm is set.
- After turning the alarm on, the alarm will reset automatically.
- Turn alarm off when not using to make the batteries last longer.

## TO OPERATE The SPYX MOTION ALARM- Vibration Detector

Place Motion Alarm in or on anything that you want to protect (example: a book or backpack)

- The alarm works in any light conditions.
  - Turn on the alarm to position #V (Vibration Detector). The red LED will flash after 3 seconds to show that the alarm is ready to go!
- Test the alarm by picking up or moving the object that the alarm sits on
- The alarm will sound for 2 to 3 seconds show you that the alarm is set.
  - After turning the alarm on, the alarm will reset automatically.
  - Turn alarm off when not using to make the batteries last longer

## ADULTS: TO REPLACE BATTERIES

- Requires 2 AAA (LR03) batteries, not included.
- Use a small Phillips screwdriver to loosen the screw and remove battery compartment cover, (Fig. 2)
- NOTE: Screws will not detach from battery compartment cover.
- Place batteries in the compartment as shown.
- Replace battery compartment cover and tighten screws.

## BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type are recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

**Warning: Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

Product specifications subject to change.

MOTION ALARM 10041-IS-US



IF YOU HAVE ANY QUESTIONS, PLEASE  
CONTACT US AT  
[www.atomicmonkeyproducts.com/help](http://www.atomicmonkeyproducts.com/help)

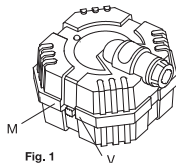 


Fig. 1

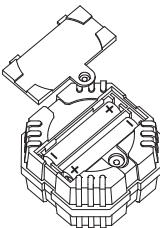 
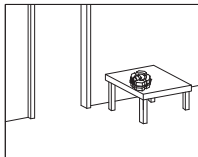 


Fig. 2