



Voice Disguiser™

Record and Disguise your voice!

Ages 6 and Up
10055

Requires 3 386 (LR43)
batteries, included

**Important: Please save this instruction sheet.
It contains valuable product information.**

How to Play

The SpyX Voice Disguiser records up to 6 seconds of any sound including your voice. You can then play back that sound or voice so that it sounds completely different! That way you can disguise your voice when leaving messages.

- 1) **To record your voice**, press and hold the record button, you will hear 1 beep. This is when you start talking into the microphone. When you hear 2 beeps let go of the record button. Fig 1
- 2) For the best voice disguising, put the disguise slide in the middle position.
- 3) Press play once to **play back** the message that you recorded.
- 4) While it is playing, move the disguise slide back and forth to hear how you can make your message sound freaky! You can speed it up or slow it down!
- 5) The message will repeat over and over if you hold the play button.

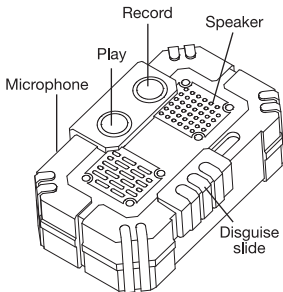


Fig. 1

ATTENTION ADULTS—TO REPLACE BATTERIES Fig 2.
SpyX Voice Disguiser requires 3 – 386 (LR43) batteries, included.

1. Locate the battery compartment on the base of the toy. Use a small Phillips head screwdriver to loosen the screw, and remove the **BATTERY COVER**.
2. Remove all old batteries.
3. Place new batteries in compartment as shown
4. Replace the battery cover and tighten screw.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

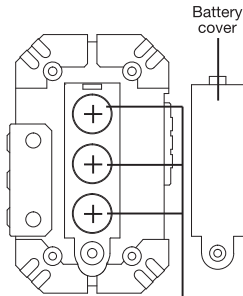


Fig. 2

Batteries

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Warning: Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product specifications subject to change.

VOICE DISGUISER 10055-IS-US



**IF YOU HAVE ANY QUESTIONS, PLEASE
CONTACT US AT**
www.atomicmonkeyproducts.com/help